



HPS LLC PO Box 855 Rhome, TX 76078

1. Place the media into your printers manual feed or multi-purpose tray tabbed edge first. The tabbed edge will prevent the media from separating from the liner while in your printer. This allows for paper jams to be easily and quickly cleared should they occur. We recommend feeding no more than 10 sheets of polyester media at a time through your printer, to keep the printer from getting too hot and effecting image quality. Always print on the glossy side of the media.




2. To print on the polyester media select "**File**" then "**Print**" and then "**Properties**". Look for a setting such as "Paper Type" "Media Type" or "Type". Select "Plain Paper" as your paper or media type. This will keep the temperature of the printers fuser unit to a minimum, allowing the toner to bond to the glossy polyester film, but without getting the polyester film too hot, which can cause jams, and image clarity problems.



3. Our polyester media is broadly compatible with most newer high heat color laser printers. While printers vary, some general rules apply. If the toner is not properly bonding, and able to be wiped off with your fingers change the print setting from "Plain Paper" to "Recycled" or "Bond Paper". If your printer lacks these paper settings, look for a setting such as: "75-105 g/m2" or "Light Glossy". This will moderately increase the heat the material fuses out, allowing for better toner adhesion.



4. After the sheet has printed you can then remove the colored tab that was protecting the media from causing a jam by peeling it away from the sheet gently. The tab will come away cleanly leaving the entire sheet useable for your label(s). If using the entire sheet as one label peel back 1-2" of the paper backing and apply that to your surface. Slowly peel the rest of the backing away, gently smoothing out any air bubbles as you proceed.

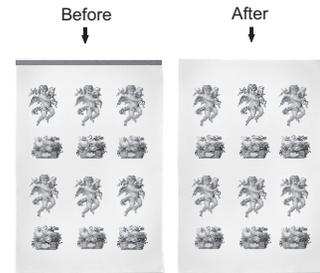

5. If your design includes more than one label per sheet, use a very sharp pair of scissors or a craft knife to carefully cut out your individual designs. Cut as close to the edges of your design as possible to minimize the surrounding white edge, this will minimize the profile of your label, making it look more like part of the object, with less visible edge.



## BONUS TIPS!

- This media can be removed and re-used. Store clings on the backing paper when not in use.
- If printing for applying inside of a window or glass door, make sure to print in mirror or reverse image.
- Always apply labels to a clean surface. Remove any residual dust, soot, or grease before application.
- While applying, only press down on a small area of the label at a time to minimize air bubbles.
- Do not use excessive pressure when applying, or the laser toner may smudge.
- The best way to always avoid a paper jam is to load each sheet individually, one at a time.
- If this media is not compatible with your printer, please try our line of laser printable polyester.

**Disclaimer:** Our media has been tested with numerous personal laser printers. The user is responsible for determining suitability with his printer and application. The maximum liability of the seller shall be to replace product found to be defective. Neither the manufacturer nor the seller shall be held liable for any injury, direct or consequential, arising out of the use of, or inability to use this paper/film.